
## WLM-DOLPHN B – Straight Header

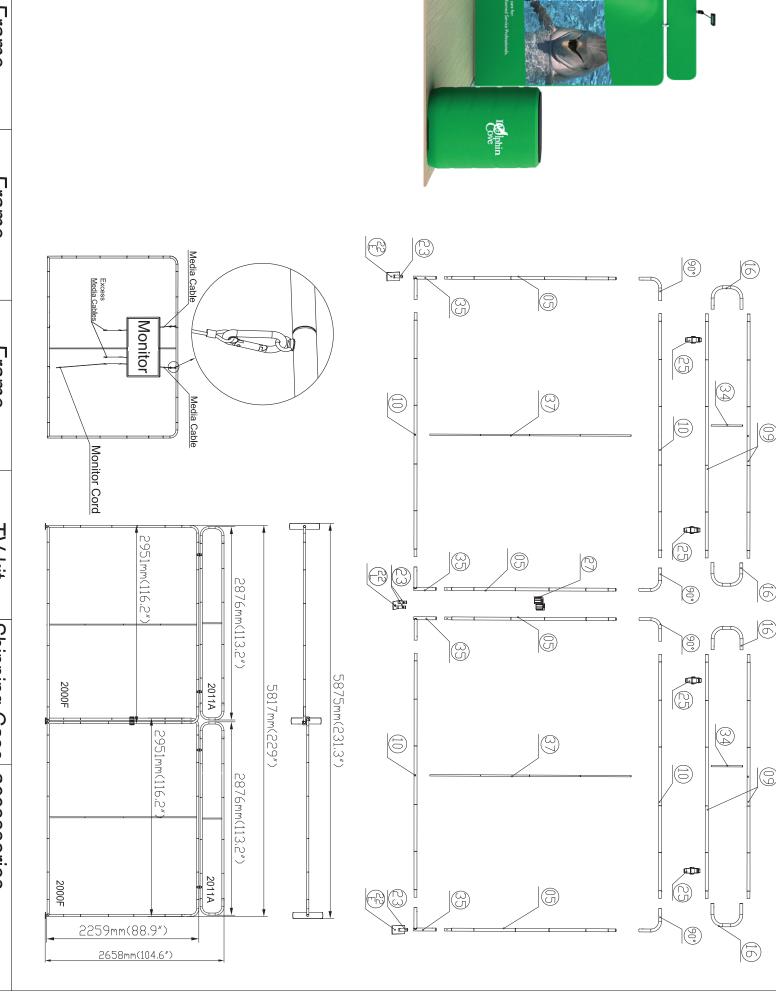

## Setup Instructions

- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.



NO.	05)	10	23	37	27	
NO. Quantity Confirm NO.	4	4	4	2	1	Frame
	35)	90°	(22) (E)	(22) (L2)	(25) clear	
Quantity Confirm NO.	4	4	2		8	Frame
NO.	34)	09	16			
Quantity	2	4	4			Frame
Confirm						
NO.						
Quantity						Frame
Confirm						
NO.			\			
Quantity						Frame
Confirm						
NO.						_
Quantit						Frame
ty Confin						ē
m NO.			40"	32"	22.6"	
Confirm						TV kit
				CA500	CA900	Ship
				00	00	) ping
NO. Confirm						Shipping Case accessories
						ries