

## WLM-MARLIN B – Straight Header

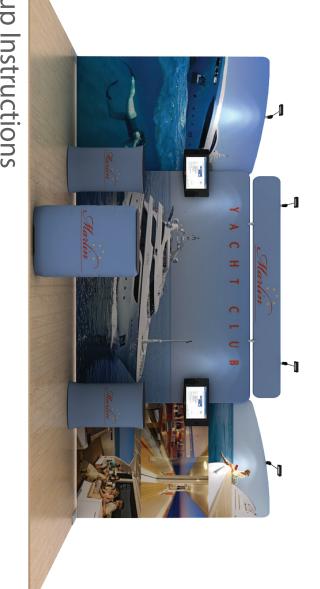

## Setup Instructions

- according to the assembly diagram. 1. Take all the parts out of the bags and lay them on the ground
- 2. Make sure that all the corresponding numbers are correct.
- spring pop up on place. difficult you can slightly twist the parts together to make the locking 3. Now start pushing the pipes together until they firmly click, if
- 4. Its time to get your hands cleaned as now you are ready to handle fabric to the bottom, now close the Zipper. frame, feed only a few feet, then stand the frame up then slide the the printed fabric. Feed the fabric from the round edges of the
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- they are designed tight so they lock well. 6. To lock the frames together you can use the "S" shaped brackets,
- clear plastic clips. 7. If you have a header in the kit you can fix to the top by using the

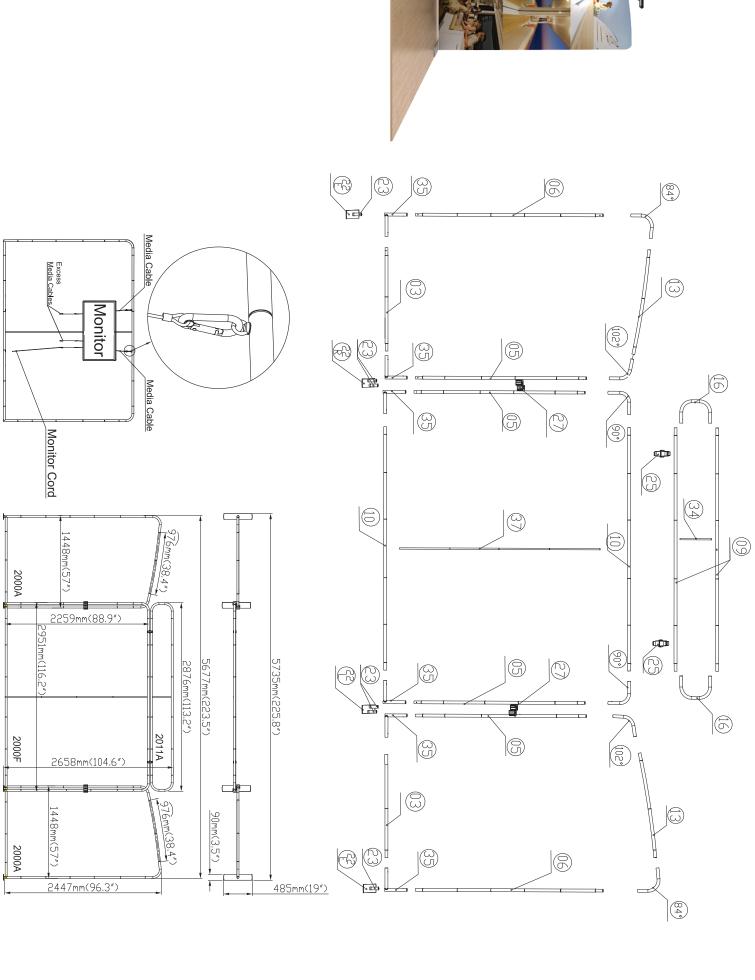

NO.	06)	<u>1</u> 3	84 9	1029	(22) E	
Quantity	2	2	2	2	2	Frame
Confirm						
NO.	03)	05)	10	23	35)	
Quantity	2	4	2	6	6	Frame
Confirm						
NO.	(- <u>23</u> )	\(\mathbb{R}\)	27	90°	<u>37</u>	
Quantity	_		2	2	1	Frame
Confirm						
NO.	34	09	16	25) clear		
Quantity	_	2	2	4		Frame
Confirm						
NO.						
NO. Quantity Confirm NO. Quant						Frame
Confin						
ON L						
. Quan						Frame
tity Co						ne
nfirm						
NO.			40"	32"	22.6"	
Confirm						TV kit
NO.				CA500	CA900	Shipp
NO. Confirm						Shipping Case accessories
						e ac
						cesso
						ories