
WLM-ORCA B – Straight Header

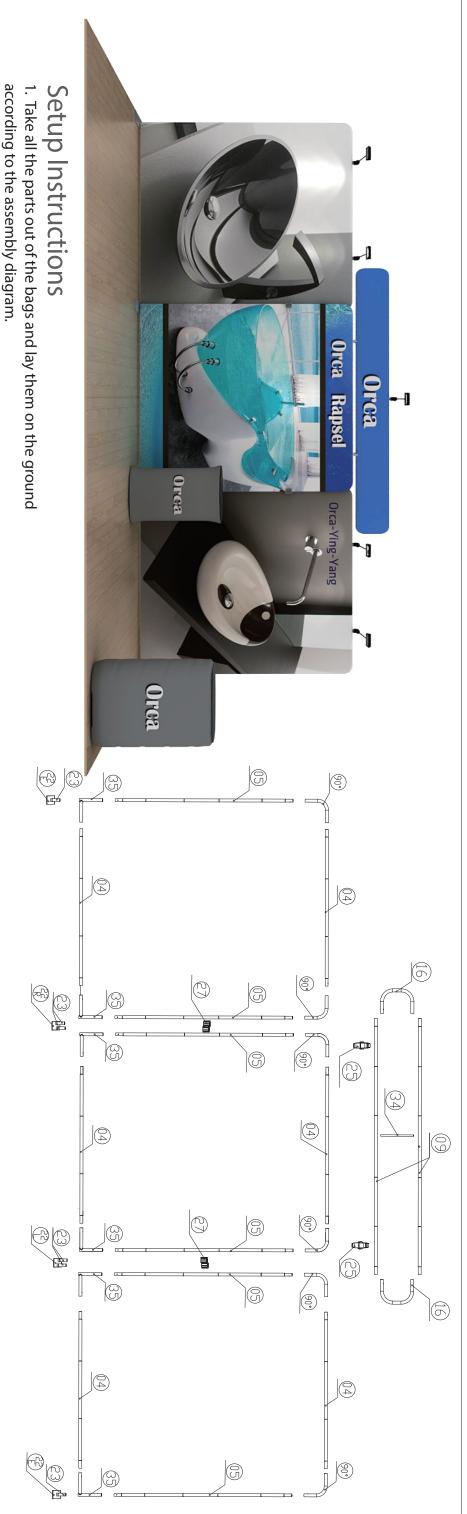

- according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- spring pop up on place. difficult you can slightly twist the parts together to make the locking 3. Now start pushing the pipes together until they firmly click, if
- the printed fabric. Feed the fabric from the round edges of the 4. Its time to get your hands cleaned as now you are ready to handle fabric to the bottom, now close the Zipper. frame, feed only a few feet, then stand the frame up then slide the

Media Cak

Media Cable

2006mm(79")

TO DE

5848mm(230,2")

Monitor

Monitor Cord

2000N

2000N

2000N

2259mm(88.9″) 2283mm(89.9")

- stand, lift the fabric panels and fit on the feet. 5. You can set up the feet in the position that you want to erect the
- they are designed tight so they lock well. 6. To lock the frames together you can use the "S" shaped brackets,
- clear plastic clips. 7. If you have a header in the kit you can fix to the top by using the

NO.	04)	05	23	27	35	
NO. Quantity Confirm NO.	6	6	6	2	6	Frame
NO.	90°	(E)	(22) L	(R22)	16	
Quantity	6	2	_	_	2	Frame
Confirm N	0					
IO. Quan	25 4	09 2	34) 1			Frame
Quantity Confirm NO.						ne
NO.						
Quantity						Frame
Confirm						
NO.						_
Quantity						Frame
Confirm			\			
NO. Quan						Frame
itity Co						me
าfirm						
NO.			40"	32"	22.6"	_
Confirm						TV kit
NO.				CA500	CA900	Shippi
Confirm						ng Case
					2000N*3	Shipping Case accessories