
WLM-REEF C – Curved Header



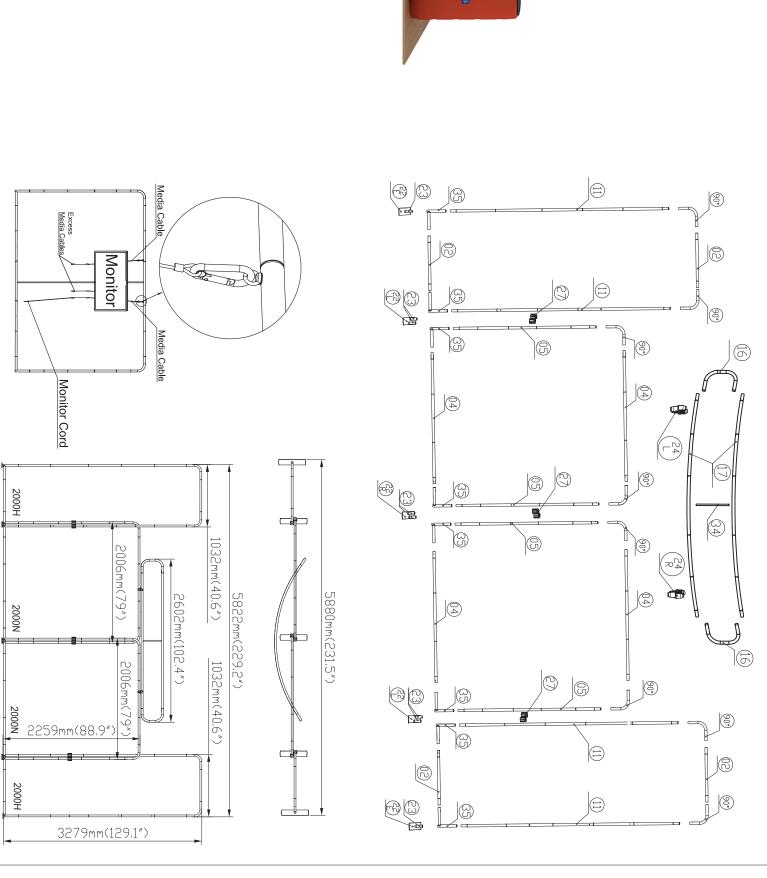

- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.



| NO. | 02 | <u>@</u> | 05 | <u></u> | 23 | |
|---|------|----------|-------|---------|-----------------|---------------------------|
| NO. Quantity Confirm NO. | 4 | 4 | 4 | 4 | 8 | Frame |
| n NO. | 27) | 35 | 90° | (E) | (22) (L) | |
| Quantity | ω | <u></u> | 00 | 2 | 2 | Frame |
| / Confirm | | | | | | (D |
| NO. | (R2) | 16 | clear | clear | 34) | |
| Quantity | _ | 2 | 2 | 2 | 1 | Frame |
| Confirm | | | | | | |
| NO. | 17) | | | | | |
| Quantity | 2 | | | | | Frame |
| Confirm | | | | | | |
| NO. | | | | | | |
| Quantity | | | | | | Frame |
| Confirm | | | | | | |
| NO. | | | | | | |
| Quantity | | | | | | Frame |
| Confirm | | | | | | |
| NO. | | | 40" | 32" | 22.6" | T |
| Confirm | | | | | | TV kit |
| NO. | | | | CA500 | CA900 | Shippi |
| Confirm | | | | | | ng Case |
| | | | | | 2000N*2+2000H*2 | Shipping Case accessories |