
WLM-TARPON B – Straight Header

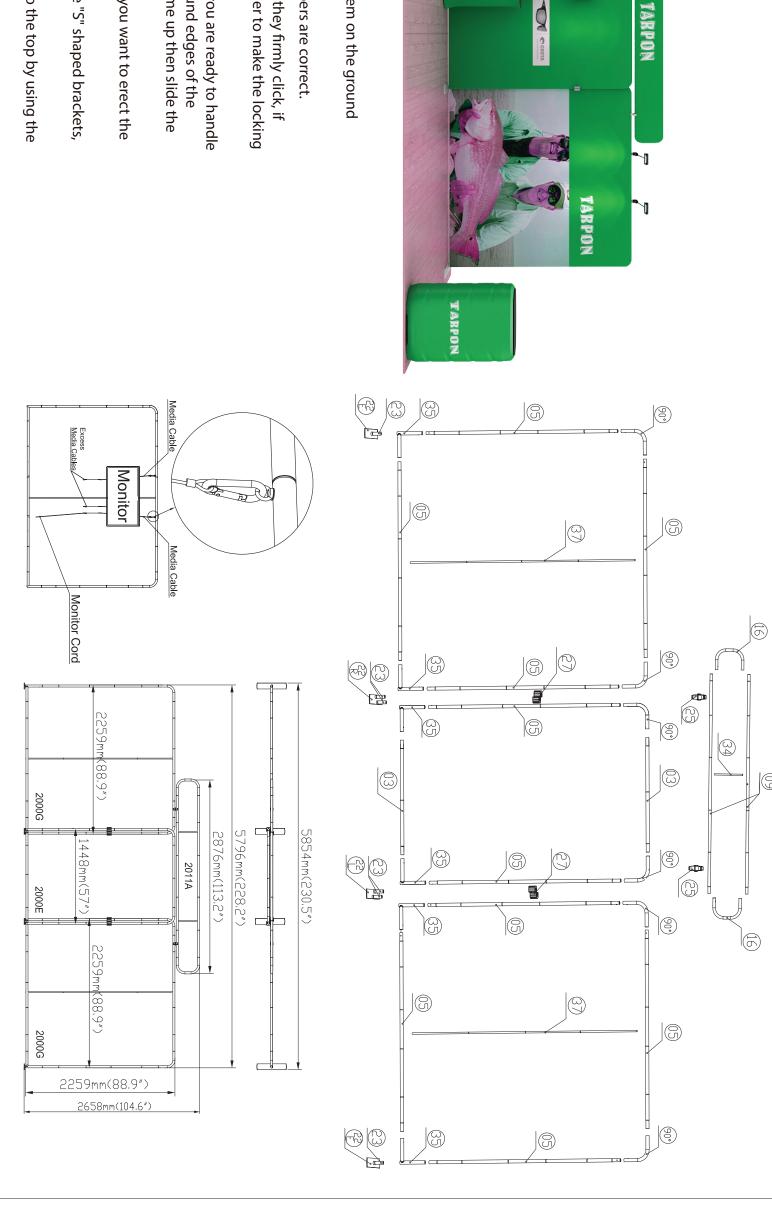

Setup Instructions

- according to the assembly diagram. 1. Take all the parts out of the bags and lay them on the ground
- 2. Make sure that all the corresponding numbers are correct.
- spring pop up on place. difficult you can slightly twist the parts together to make the locking 3. Now start pushing the pipes together until they firmly click, if
- 4. Its time to get your hands cleaned as now you are ready to handle fabric to the bottom, now close the Zipper. frame, feed only a few feet, then stand the frame up then slide the the printed fabric. Feed the fabric from the round edges of the
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- they are designed tight so they lock well. 6. To lock the frames together you can use the "S" shaped brackets,
- clear plastic clips. 7. If you have a header in the kit you can fix to the top by using the



Z	03	05	23	27	37	
<u>)</u> ည	(<u>S</u>)	5	(S)	7)	7)	F
antity	2	10	6	2	2	Frame
Confirm						
NO.	35	90°	(22) R	(E)	(22) L	
Quantity	6	6	1	2	1	Frame
Confirm						(D
NO.	25 clear	09	34)	<u>16</u>		
Quantity	4	2	1	2		Frame
Confirm						
NO.						
Quantity						Frame
Confirm						,,
NO.			\			
Quantity						Frame
Confirm				\		,,
NO.						
NO. Quantity Confirm NO.						Frame
NO.			40"	32"	22.6"	
Confirm						TV kit
NO.				CA500	CA900	Shippi
NO. Confirm						ng Case
					2000G*2+2000E*1	Shipping Case accessories