
WLM-ATLANTIC A

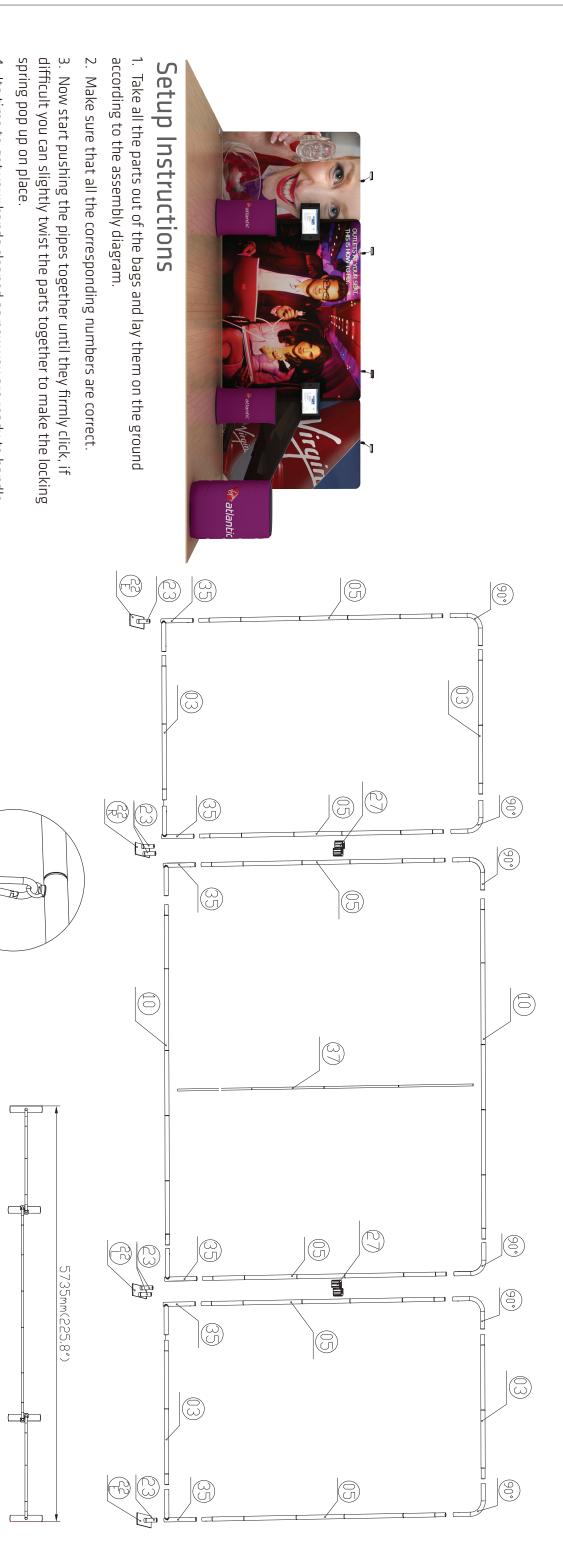

- spring pop up on place. difficult you can slightly twist the parts together to make the locking
- the bottom, now close the Zipper. 4. Its time to get your hands cleaned as now you are ready to handle feed only a few feet, then stand the frame up then slide the fabric to the printed fabric. Feed the fabric from the round edges of the frame
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet

Monitor

Monitor Cord

1448mm(57"

2000E

2000F

.448mm(57")

2259mm(88.9")

Media Cable

5677mm(223.5")

- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- clear plastic clips. 7. If you have a header in the kit you can fix to the top by using the

NO. Qu	<u>a</u>	05	10	23	27)	Fr
antity	4	တ	2	o	2	Frame
NO. Quantity Confirm NO.	35	37	(22) (E)	(22)	(22) (R)	
Quantity Confirm	6		2		1	Frame
NO.	90°					
Quantity	6					Frame
Confirm						
NO.						
Quantity Confirm NO.						Frame
νο. Ω		\			_	П
uantity Confirm						Frame
NO.						
Quantity					\	Frame
Confirm NO.			40"	32"	22.6"	
Confirm						TV kit
NO.				CA500	CA900	Shipp
Confirm						Shipping Case accessories