



WLM-2000A

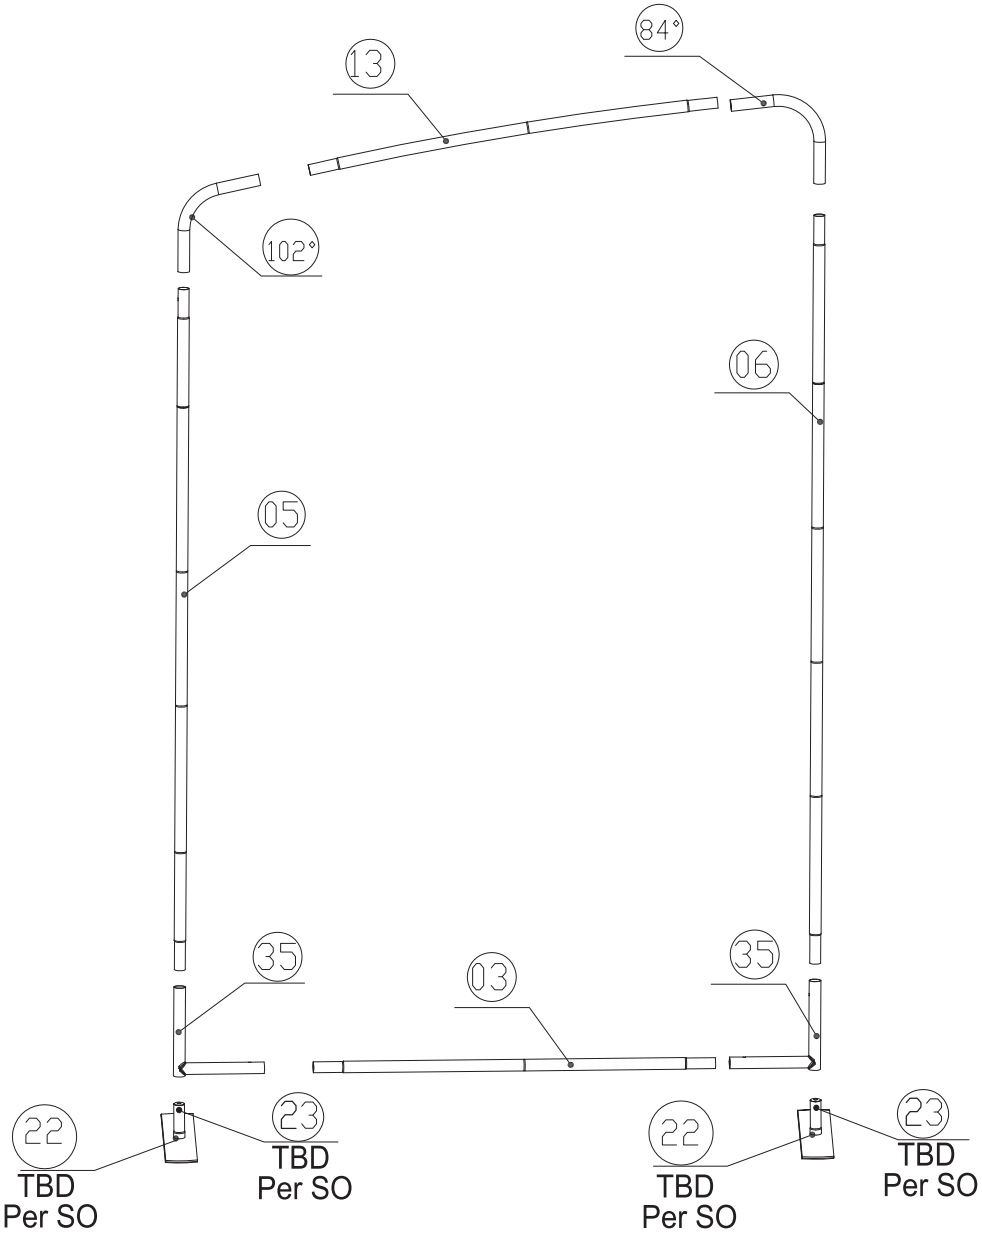

Setup Instructions

- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets or WL-25 brackets, they are designed tight so they lock well.

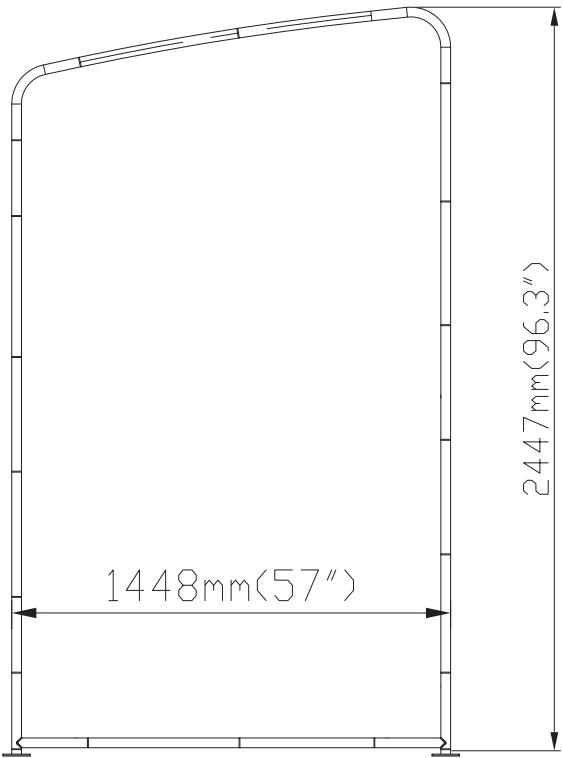

Frame			Frame			Frame			Frame			Frame			Frame			TV kit		Shipping Case		accessories	
35	2																	22.6"		CA900			
13	1		23	TBD Per SO														32"		CA500			
06	1		22	TBD Per SO														40"		NYLON BAG			
05	1		102°	1																			
03	1		84°	1																			
NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Confirm	NO.	Confirm		